


Connect the tubing to the round valve at the bottom of the Filter Bag.

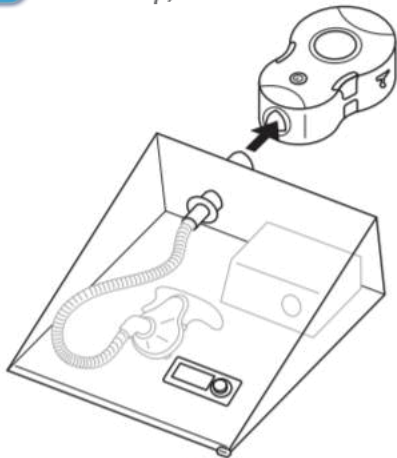

Attach the Sleep8 to the triangular valve, press the power button until the sanitization completes.